



# SWL Series Installation Instructions

**WARNING:** Before proceeding, read all instructions carefully to insure proper and safe installation.

**WARNING:** Risk of fire or electrical shock. Disconnect power before installing or servicing.

**WARNING:** Risk of electrical shock. High temperatures inside luminaire. Make certain line voltage corresponds with ballast's primary voltage. (See ballast label).

**WARNING:** All wiring to be performed per National Electrical Code and local code by a qualified electrician.

|  |  |  |
|--|--|--|
|  |  |  |
| <p>1.) REMOVE END CAPS &amp; LENS. END CAPS REMOVED VIA SCREW IN CENTER OF END CAP</p> | <p>2.) REMOVE LED PANEL TO ACCESS DRIVER &amp; FOR MOUNTING PURPOSES. LED PANEL CAN VIA SAFETY TETHERS DURING INSTALL.</p>                         | <p>2.) LAYOUT MOUNTING CENTER LOCATION ON WALL FOR INSTALLATION. MOUNT FIXTURE TO WALL WITH APPROPRIATE FASTENERS.</p> |
|  |  |  |
| <p>3.) MAKE APPROPRIATE WIRE CONNECTIONS. REATTACH LED PANEL, LENS &amp; END CAPS</p>  | <p>6.) ENERGIZE CIRCUIT. REMOVE SENSOR COVER TO ADJUST SETTINGS. REFER TO SENSOR MANUFACTURE INSTRUCTIONS. REPLACE SENSOR COVER WHEN FINISHED.</p> | <p>7.) FIXTURE IS NOW INSTALLED.</p>   |